Fastener Tightening Specifications

Application	Specification	
	Metric	English
Outside Mirror to Door Retaining Screws	3 N-m	27 lb in
Rearview Mirror Assembly to Windscreen Retaining Screw	2 N-m	16 lb in

© 2010 General Motors Corporation. All rights reserved.

Outside Rearview Mirror Opening Cover Replacement

Removal Procedure

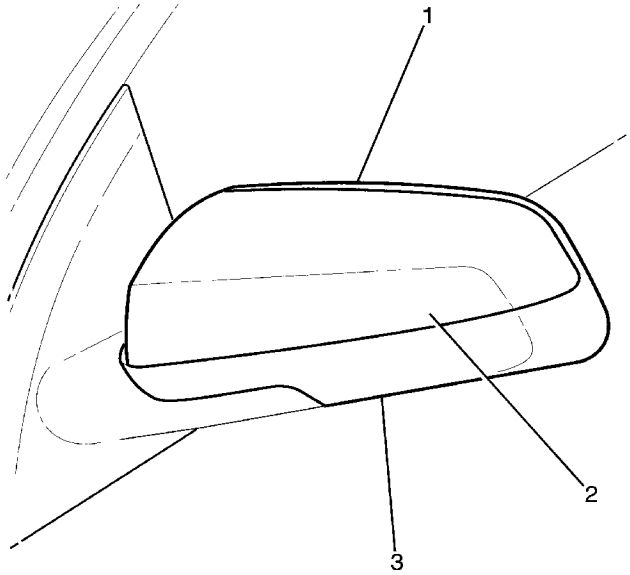

1. Firmly grasp mirror cover at (2, 1) and lift upwards then outwards from the mirror (3) to release the retainers.

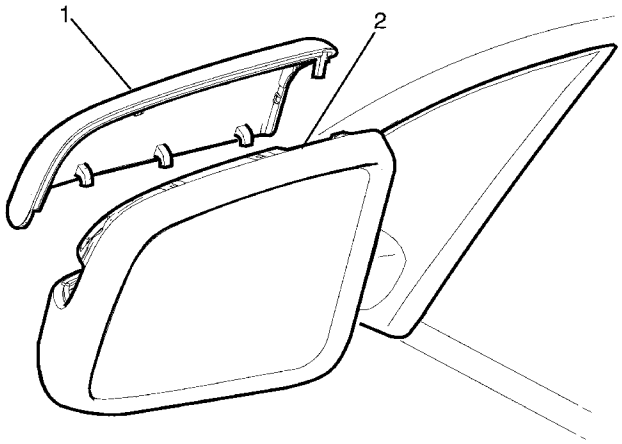

2. Remove the mirror cover (1) from the mirror (2).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

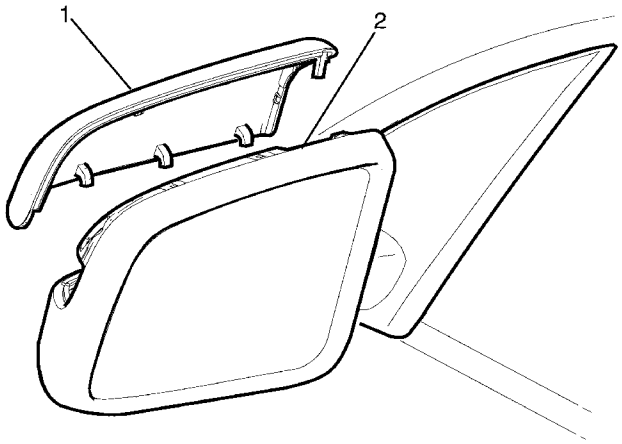

1. Push the mirror cover (1) at the top first then the lower side inwards to attach it to the mirror (2).
2. Install the mirror cover (1) to the mirror (2).

Power Mirror Switch Replacement

Removal Procedure

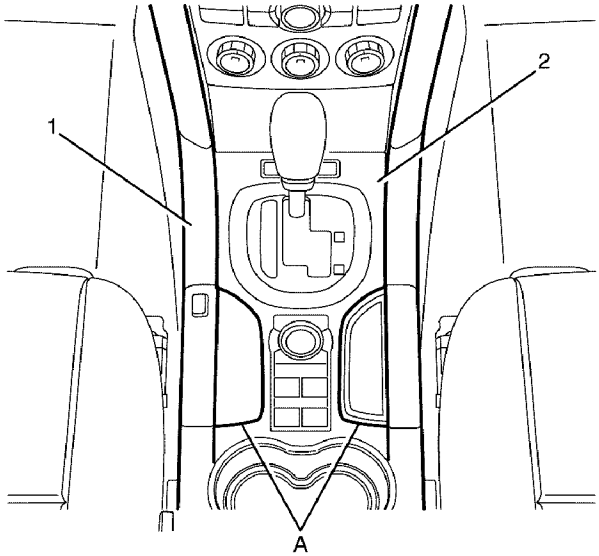

Important: The console trim plate (1) is retained by clips.

1. Grasp the console trim plate (1) at point (A) and pull upwards to disengage the retaining clips from the floor console (2).

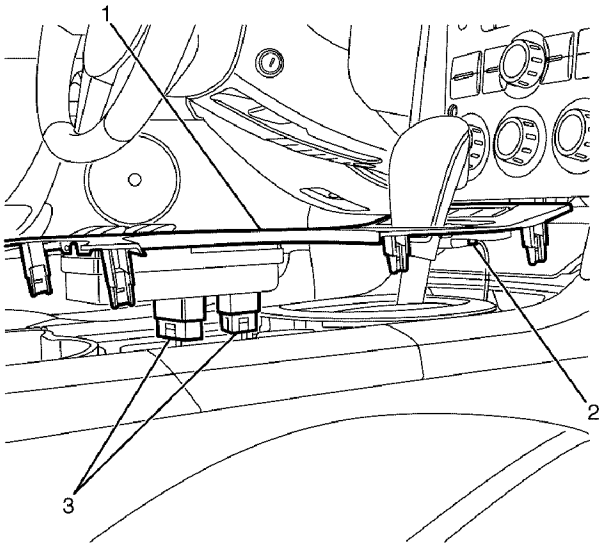

2. Disconnect the window and exterior mirror switch electrical connector (3).

© 2010 General Motors Corporation. All rights reserved.

3. Disconnect the ESP and heated seat switches assembly electrical connector (2).
4. Remove the console trim plate (1).

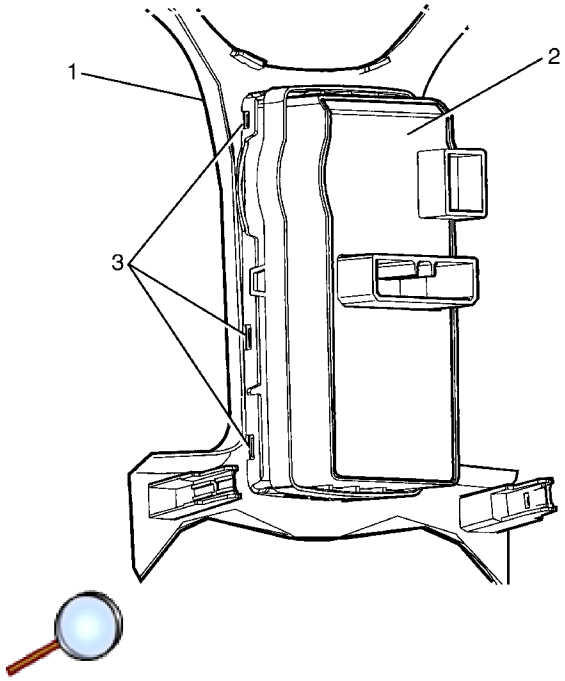

Important: Remove the power window/mirror switch (2) by releasing from the retaining clips (3) on the console trim plate (1).

5. Remove the power window/mirror switch (2) from the console trim plate (1).

Installation Procedure

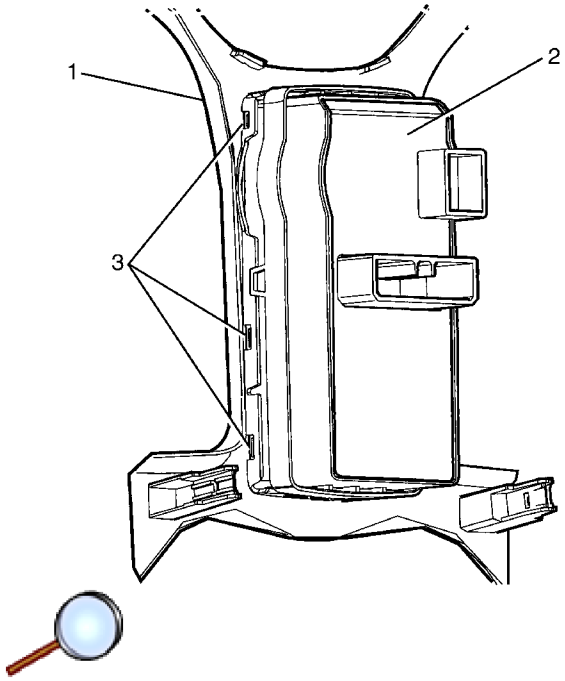

Important: Install the power window/mirror switch (2) by attaching to the retaining clips (3) on the console trim plate (1).

1. Install the power window/mirror switch (2) to the console trim plate (1).

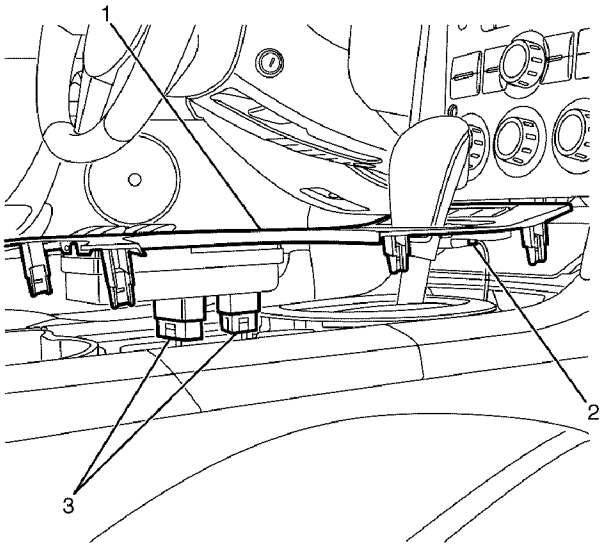

2. Position the console trim plate (1) over the floor console.
3. Connect the window and exterior mirror switch electrical connector (3).
4. Connect the ESP and heated seat switches assembly electrical connector (2).

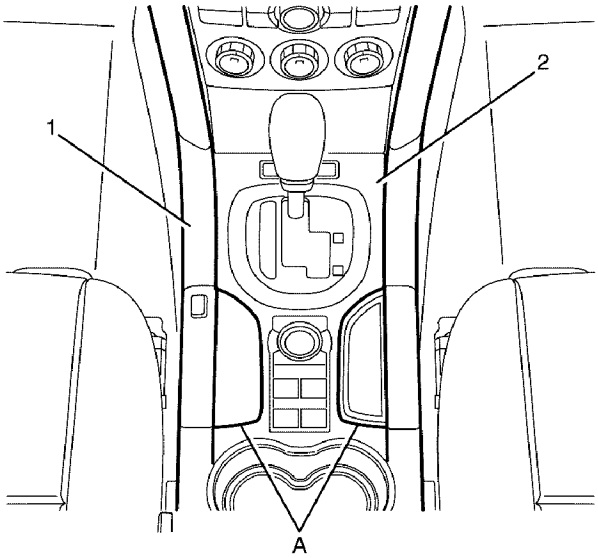

Important: The console trim plate (1) is retained by clips.

5. Install the console trim plate (1) and push downwards at (A) to engage the retaining clips to the floor console (2).

Power Mirror Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Remove the upper auxiliary weatherstrip. Refer to Front Side Door Upper Auxiliary Weatherstrip Replacement.

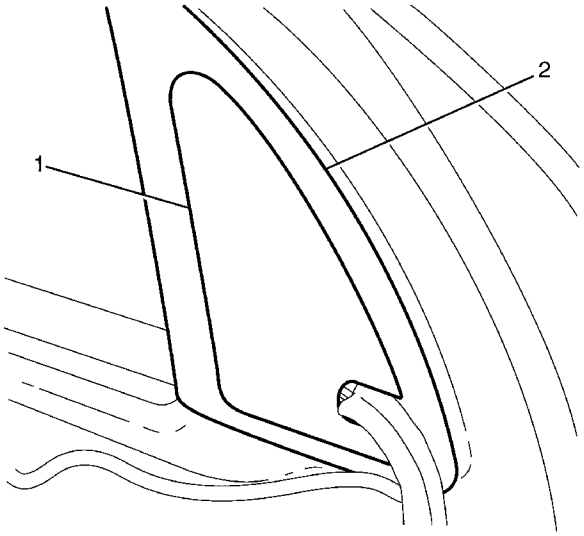

Important: Use a suitable tool to pry open inner panel (1).

3. Remove the inner panel (1) from the door (2).

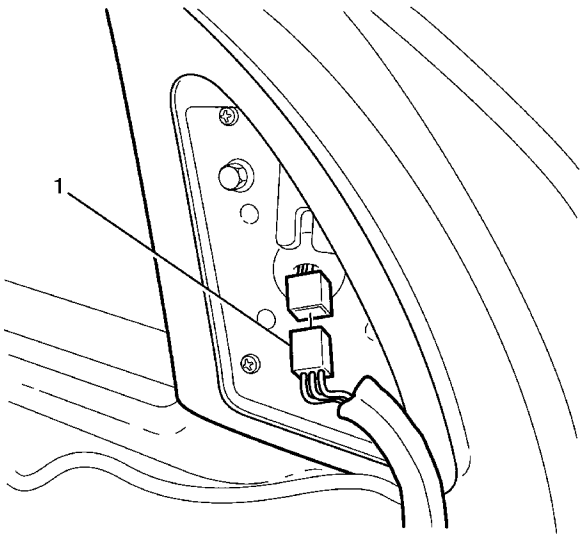

© 2010 General Motors Corporation. All rights reserved.

4. Disconnect the mirror to door harness electrical connector (1).

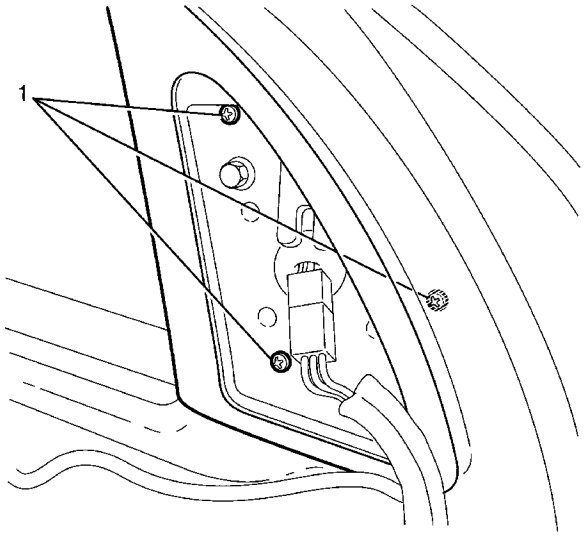

Important: Position aside upper auxiliary weatherstrip to locate the front mirror to door retaining screw.

Important: Support the mirror when removing retaining screws (1).

5. Remove the mirror to door retaining screws (1).
6. Remove the mirror from the door.

Installation Procedure

1. Position the mirror to the door.

Notice: Refer to Fastener Notice in the Preface section.

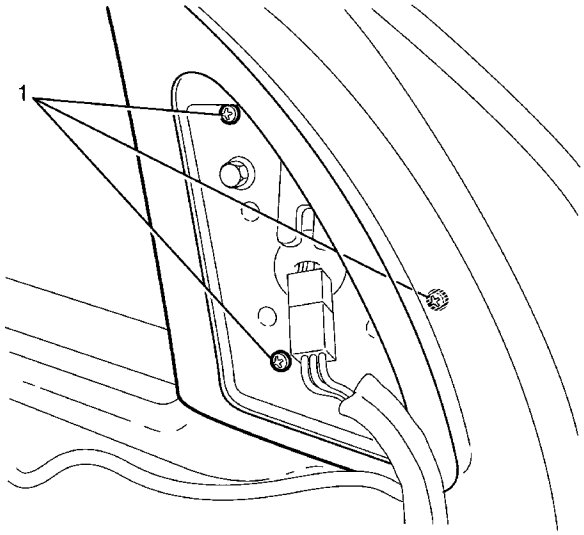

2. Install the mirror to door retaining screws (1).

Tighten
Tighten the screws to 3 N-m (27 lb in).

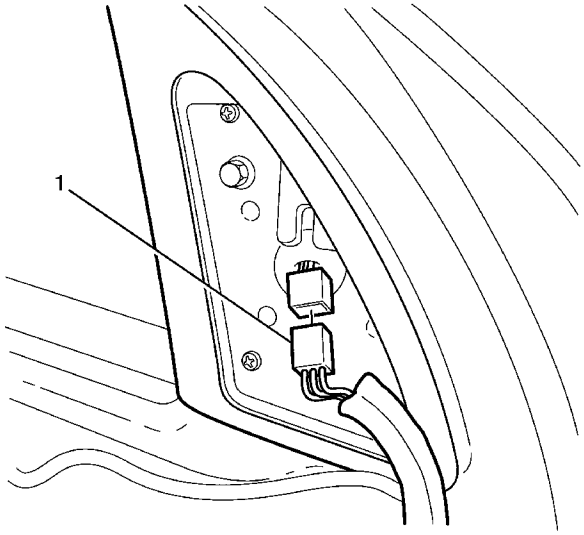

3. Connect the mirror to door harness electrical connector (1).

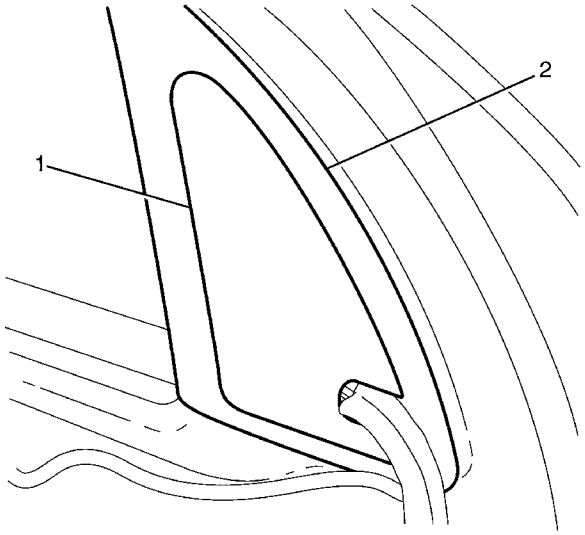

Important: Push the inner panel (1) to attach the retainers.

4. Install the inner panel (1) to the door (2).
5. Install the upper auxiliary weatherstrip. Refer to Front Side Door Upper Auxiliary Weatherstrip Replacement.
6. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Outside Rearview Mirror Glass Replacement

Removal Procedure

1. Remove the mirror cover. Refer to Outside Rearview Mirror Opening Cover Replacement.

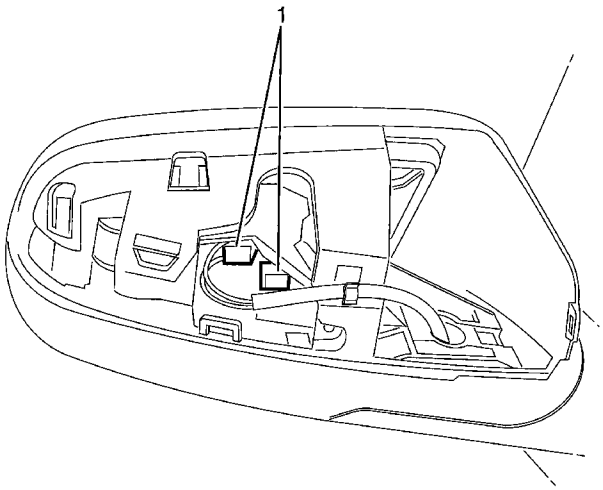

2. Disconnect the mirror electrical connectors (1).

Caution: When working with any type of glass or sheet metal with exposed or rough edges, wear approved safety glasses and gloves in order to reduce the chance of personal injury.

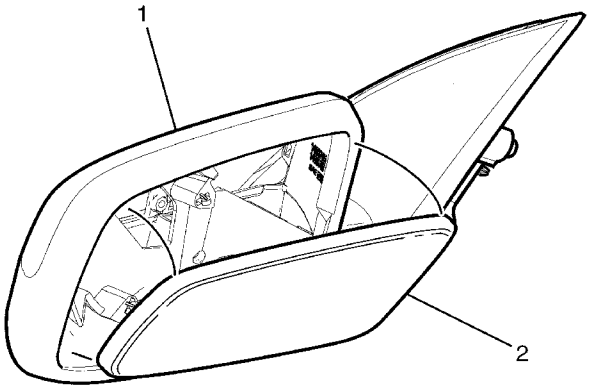

© 2010 General Motors Corporation. All rights reserved.

Important: Push the mirror face (1) inward at the bottom of the face until full travel is reached. Pull the mirror face (1) from the top to release the mirror face retaining clips.

3. Remove the mirror face (1) from the mirror (2).

Installation Procedure

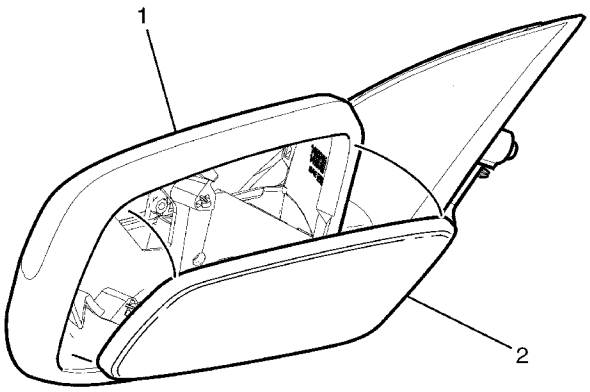

Important: Push the mirror face (2) into the mirror (1) until an audible click is heard.

1. Install the mirror face (1) to the outside rearview mirror (2).

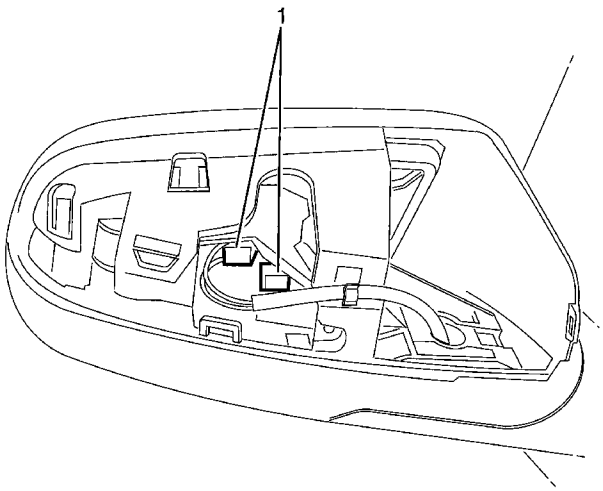

2. Connect the electrical connectors (1).
3. Install the mirror cover. Refer to Outside Rearview Mirror Opening Cover Replacement.
4. Inspect the mirror for correct operation.

Inside Rearview Mirror Replacement

Removal Procedure

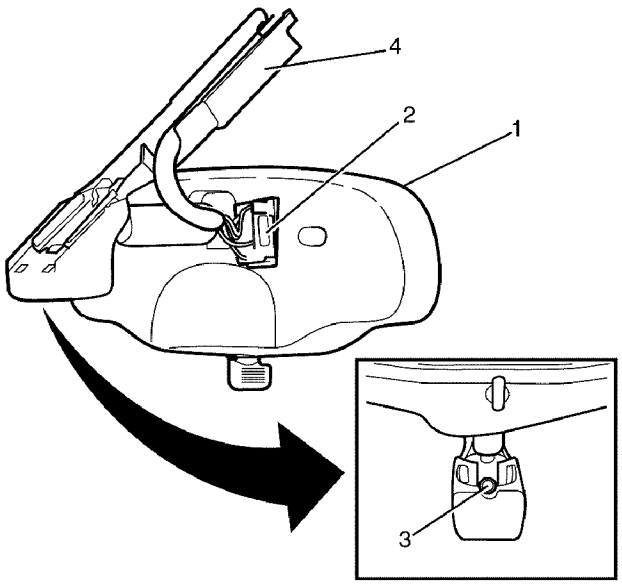

1. Detach the rearview mirror trim (4) from the headliner by gently sliding downward.
2. Disconnect the electrical connector (2) from the back of the rearview mirror (1).
3. Adjust the rearview mirror (1) to the full upright position.
4. At the rearview mirror assembly base, remove the rearview mirror assembly to windscreen retaining screw (3)

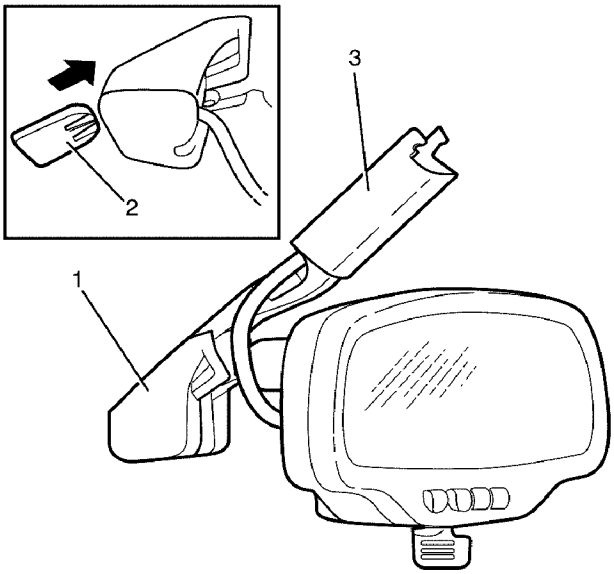

© 2010 General Motors Corporation. All rights reserved.

Important: Slide the rearview mirror assembly (1) upward to remove from the retaining plate (2).

5. Remove the rearview mirror assembly (1) from the vehicle.

Installation Procedure

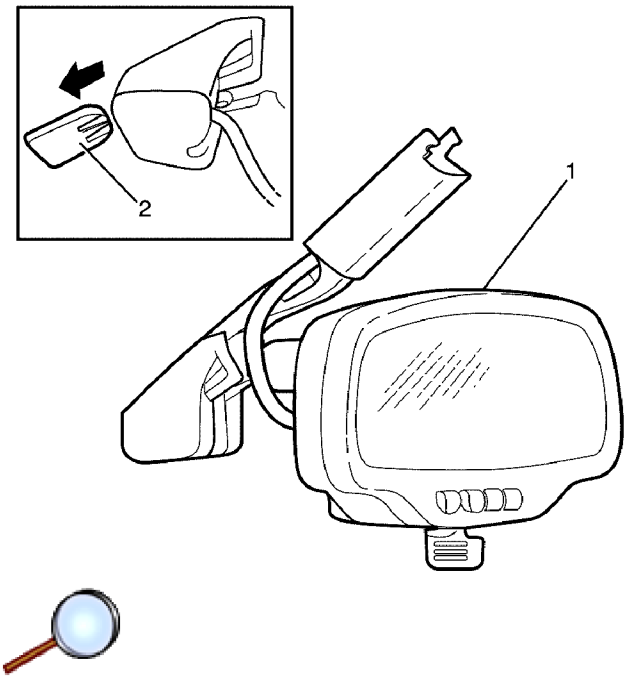

Important: Position the center of the rearview mirror assembly (1) at the top of the retaining plate (2).

1. Install the rearview mirror assembly (1) to the vehicle.

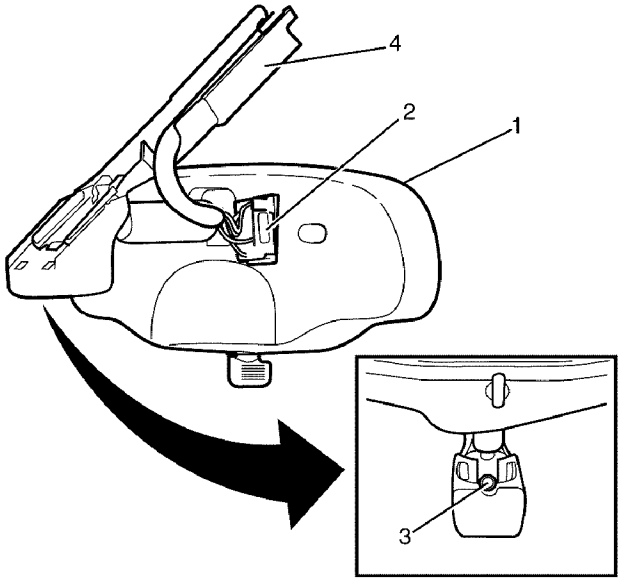

2. Install the rearview mirror assembly to windscreen retaining plate retaining screw (3).

   Tighten
   Tighten the screw to 2 N.m (18lb in)

3. Connect the electrical connector (2) to the mirror assembly (1).
4. Attach the rearview mirror trim (4) to the headliner by gently sliding upward.
5. Reposition the mirror assembly (1).
6. Calibrate the mirror compass. Refer to Control Module References.

Vanity Mirror Replacement

1. The vanity mirror is not a serviceable item,.
2. If the vanity mirror requires replacement it must be replaced as an assembly. Refer to Sunroof Sunshade Replacement

© 2010 General Motors Corporation. All rights reserved.